



## Clamp Bracket - suitable for desks 10 - 35mm (.39 - 1.37") thick


1 Stick rubber pad to PICCOLO base

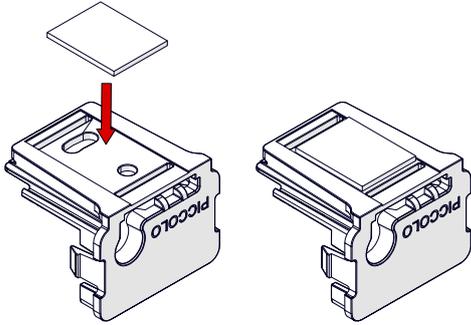

2 Place PICCOLO on surface and insert mounting bracket

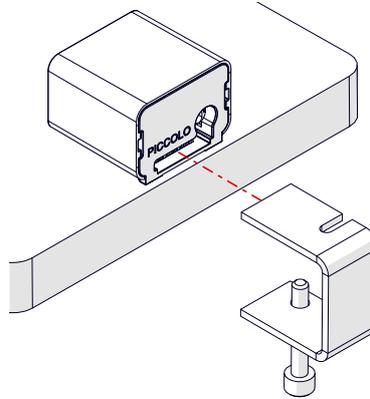



3 Tighten screws

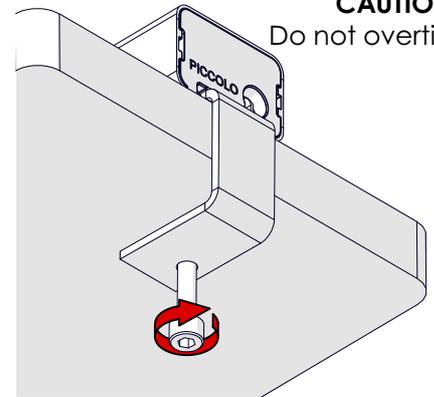


**CAUTION**  
Do not overtighten!

## Screw Down - On surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)

1 Screw PICCOLO base to surface using dimensions below

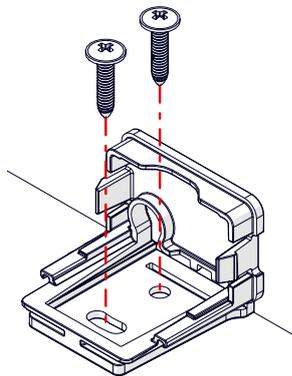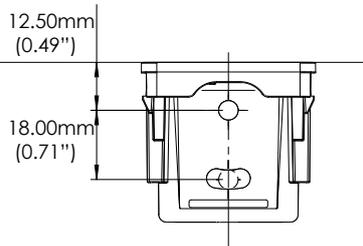


2 Slide PICCOLO body onto base until 'click' is heard

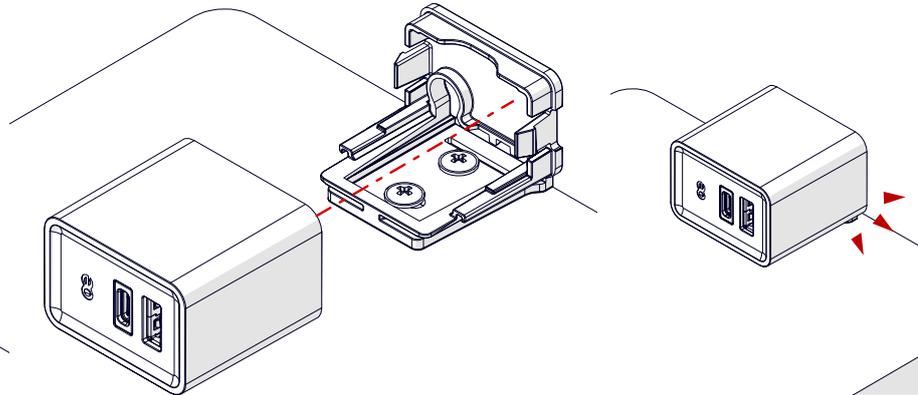


## Screw Down - Under surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)


1 Screw PICCOLO base to surface using dimensions below

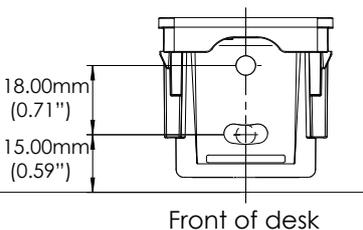

Front of desk

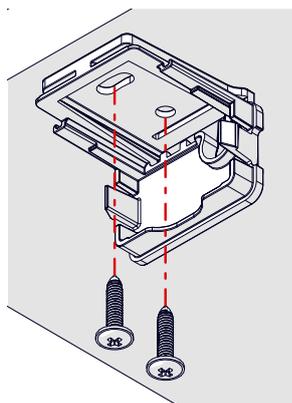



2 Slide PICCOLO body onto base until 'click' is heard

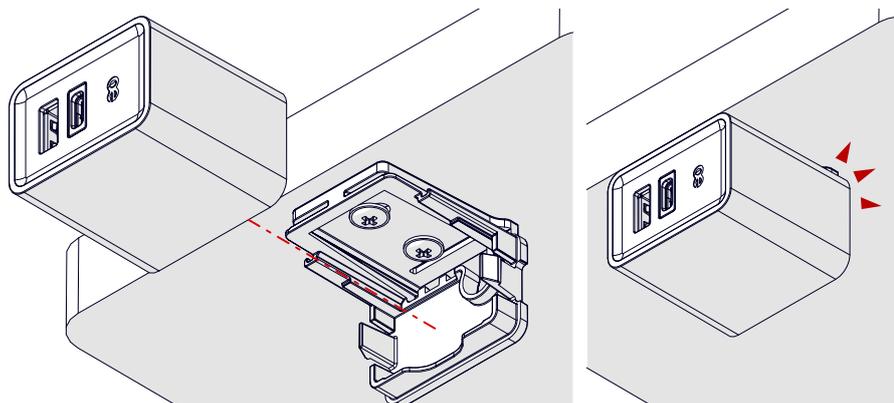



## Stick Down


- 1 Remove film from one side of fixing strip

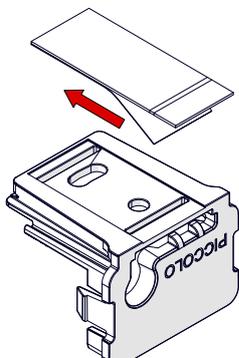
- 2 Align with highlighted area on PICCOLO base and stick down

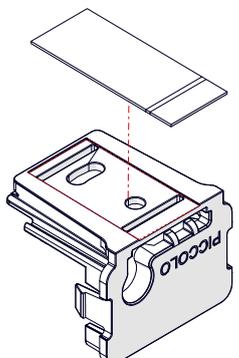
- 3 Remove film from other side of fixing strip

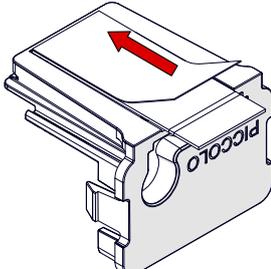

- 4 Place PICCOLO base on surface

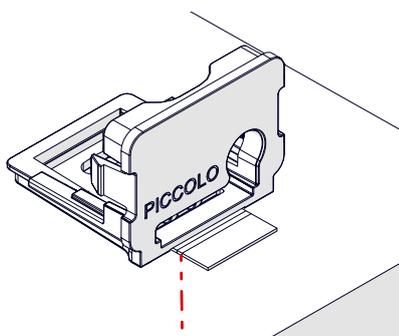

- 5 Slide PICCOLO body onto base until 'click' is heard

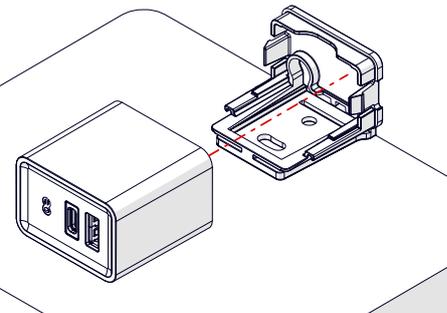



## Velcro (suitable for any pole size ideally 40-60mm\* (1.57"- 2.36"))

- 1 Stick rubber pad to PICCOLO base

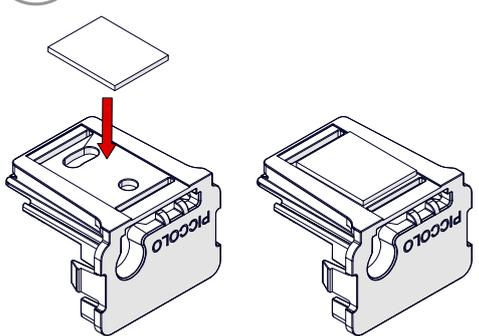
  - 2 Thread Velcro through 2 slots


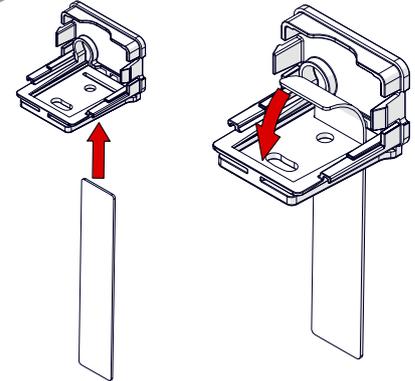

  - 3 Slide PICCOLO body onto base until 'click' is heard

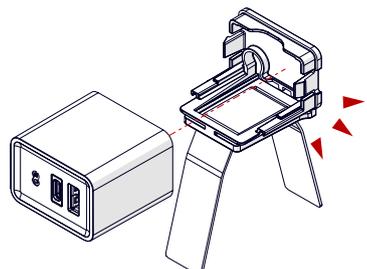
  - 4 Wrap Velcro around pole

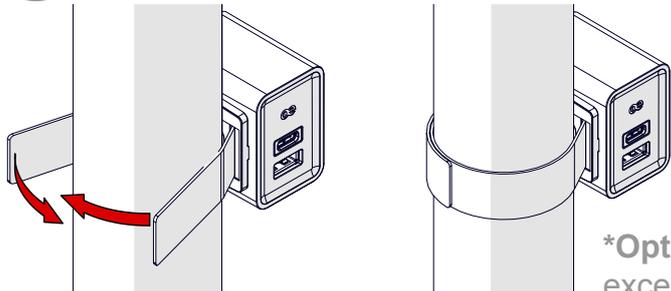

- \*Optional:** For poles below 40mm, trim off excess velcro when fitted for a neater finish

## Extracting GST08 Cable

1 Lift GST08 cable from Piccolo body

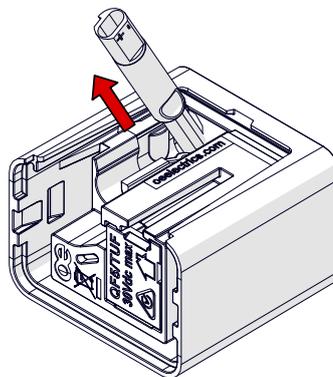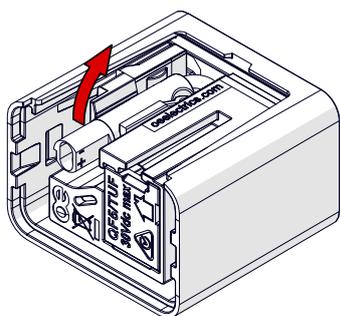

2 Slide GST08 cable through cable exit in Piccolo back

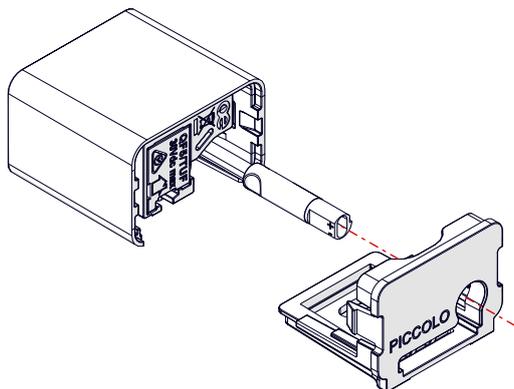

3 Place Piccolo in desired location

